

## Устройства защитного отключения SF36 Технические характеристики



Архангельск (8182)63-90-72  
Астана +7(7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48

Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54

Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)22948 -12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

## SF36 - Series Earth Leakages

The SF36 is a three phase heavy duty industrial earth leakage circuit breaker available as a surface mount and CBI Mini Rail mount device. This earth leakage circuit breaker is available with earth leakage sensitivity of 30 mA.



**SF36A**  
Mini Rail Mount  
Surface Mount



**SF36C**  
Mini Rail Mount  
Surface Mount

### Features

- Hydraulic-magnetic technology
- 100% rating capability, independent of ambient temperature
- VC 8035 compliant
- AS/NZS 3111 and AS/NZS 3190 compliant
- Immune to pulsating DC load current
- Ratings 10 to 80 A
- Earth Leakage sensitivity 30 mA
- Three pole plus switched neutral earth leakage protection
- Switches all active and neutral poles
- Precision tripping characteristics
- Reset immediately after overload
- Suitable to use for electrical isolation
- Surface mount & Mini Rail mount
- 55 mm front escutcheon

### Applications

- Mining, heavy industrial and commercial applications requiring high sensitivity earth leakage protection from electrical shock and fire hazards
- Telecom / datacom equipment
- Lighting control
- UPS equipment
- Alternative energy equipment
- Mobile power generation equipment
- Railway signalling equipment

## SF36 - Series Earth Leakages

### Technical Data

Product Type	SF36A	SF36C
Approvals	VC 8035	
Number of Poles	3+N	3+N
Standard Ampere Ratings	10 to 80 A	80 A
Sensitivity	30 mA	30 mA
Rated Voltage	415 V	415 V
Rated Interrupting / Withstand Capacity	5 kA -	- 5 kA
Time Delay Curves	2	2

Product Type	SF36AE	SF36CE
Approvals	AS/NZS 3111, AS/NZS 3190	
Number of Poles	3+N	3+N
Standard Ampere Ratings	10 to 80 A	80 A
Sensitivity	30 mA	30 mA
Rated Voltage	415 V	415 V
Rated Interrupting / Withstand Capacity	6 kA -	- 6 kA
Time Delay Curves	2	-

Product Type	SF36
Operating Temperature Range	-40 °C to +85 °C
Mounting Options	CBI Mini Rail, surface mount
Time Delay Curves	2
Endurance	1500 electrical operations (AS/NZS 3111, AS/NZS 3190)
Dielectric Strength	1480 V (single pole) / 1830 V (multi pole), 50 Hz for one minute after testing
Weight	960 g (unpacked)
Humidity	35 to 85% relative
Altitude	Certification tests done at altitude ≈ 2000 metres. Will operate at higher altitudes.
Shock	16 G (IEC 600068-2-27)
Vibration	2 G (IEC 600068-2-27) (sinusoidal wave)
Flammability	I3 - Ignition does not persist at 850 °C after glow wire is withdrawn with an oxygen index of ≥ 28
Toxicity	F1 - Smoke index of ≤ 20 which determines the fume class
Pollution Degree	PD2 - Normally only non-conductive pollution occurs. Temporary conductivity caused by condensation is to be expected.

Earth Leakage	Wire Size mm <sup>2</sup> (IEC)	Torque (IEC)	Comments
3+N	0.75 - 35 mm <sup>2</sup>	2.5 Nm	Pozidriv #2 Combi head

## SF36 - Series Earth Leakages

### Ordering Information


Example Code: S-F-36-AE--2--80A-30mA-415V---

Group	1	2	3	4	5	6	7	8	9	10
Requirement	S Frame	Type F	3 pole + N	Overload	No auxiliary	Medium delay curve 2	Current rating 80 A	Sensitivity 30 mA	Voltage 415 V AC	No special termination
Long Code	S	F	36	AE	-	2	80A	30mA	415V	-

<b>Group 1: Frame Type</b>	Code	Description	Comments
	S	117 mm wide earth leakage	
<b>Group 2: Product Type</b>	Code	Description	Comments
	F	415 V AC, 6 kA	
<b>Group 3: No of Poles</b>	Code	Description	Comments
	36	Three pole plus switched neutral (3+N)	SF36
<b>Group 4: E-L Type</b>	Code	Description	Comments
	AE	Overload (auto tripping)	White and green handle
	CE	Switch disconnecter	Green handle
<b>Group 5: Auxiliary / Additional Pole</b>	Code	Description	Comments
	-	Not applicable	Use this code if no auxiliary used
	A	Auxiliary switch	
<b>Group 6: Time Delays</b>	Code	Description	Comments
	2	Medium time delay	
<b>Group 7: Current Ratings</b>	Code / Description		Comments
	10, 16, 20, 25, 32, 40, 63, 80 A		SF36 Ratings available vary depending on certification * Other ratings are available as special orders. Check availability.
	80 A		SF36
<b>Group 8: Sensitivity</b>	Code	Description	Comments
	30mA	30 mA	Standard
<b>Group 9: Voltage</b>	Code	Description	Comments
	415V	415 V AC	
<b>Group 10: Special Termination</b>	Code	Description	Comments
	-	No special termination	

## SF36 - Series Earth Leakages


### Time Delay Curves

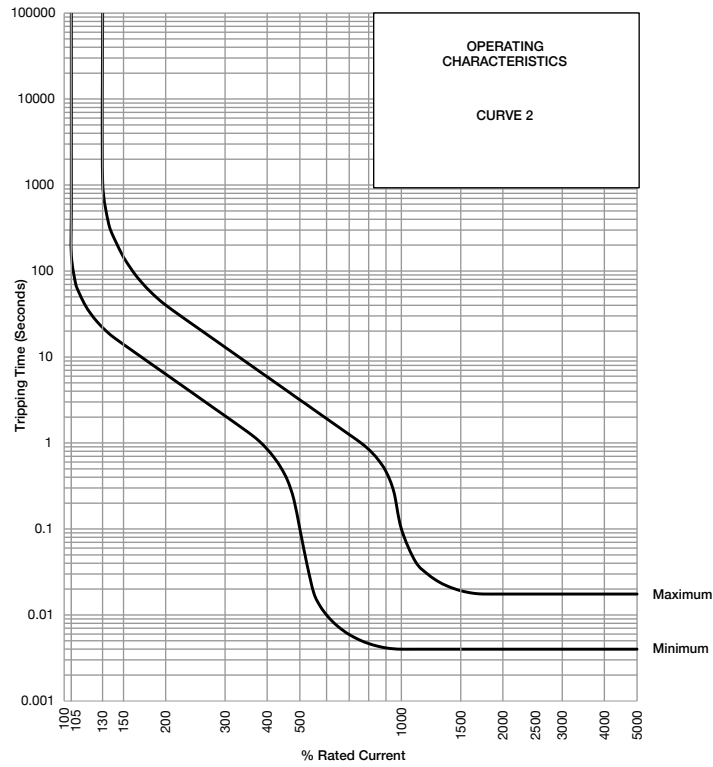

\* The published time delay curves are generated at 30°C ambient temperature with the Circuit Breaker mounted in the up-right position. The “must hold”, “must trip” and “instantaneous trip” current values are not affected by temperature, although delay time for the other operating current values may have to be adjusted using the temperature compensation curve which is available on request.

## SF36 - Series Earth Leakages

### Outline Dimensions: SF36

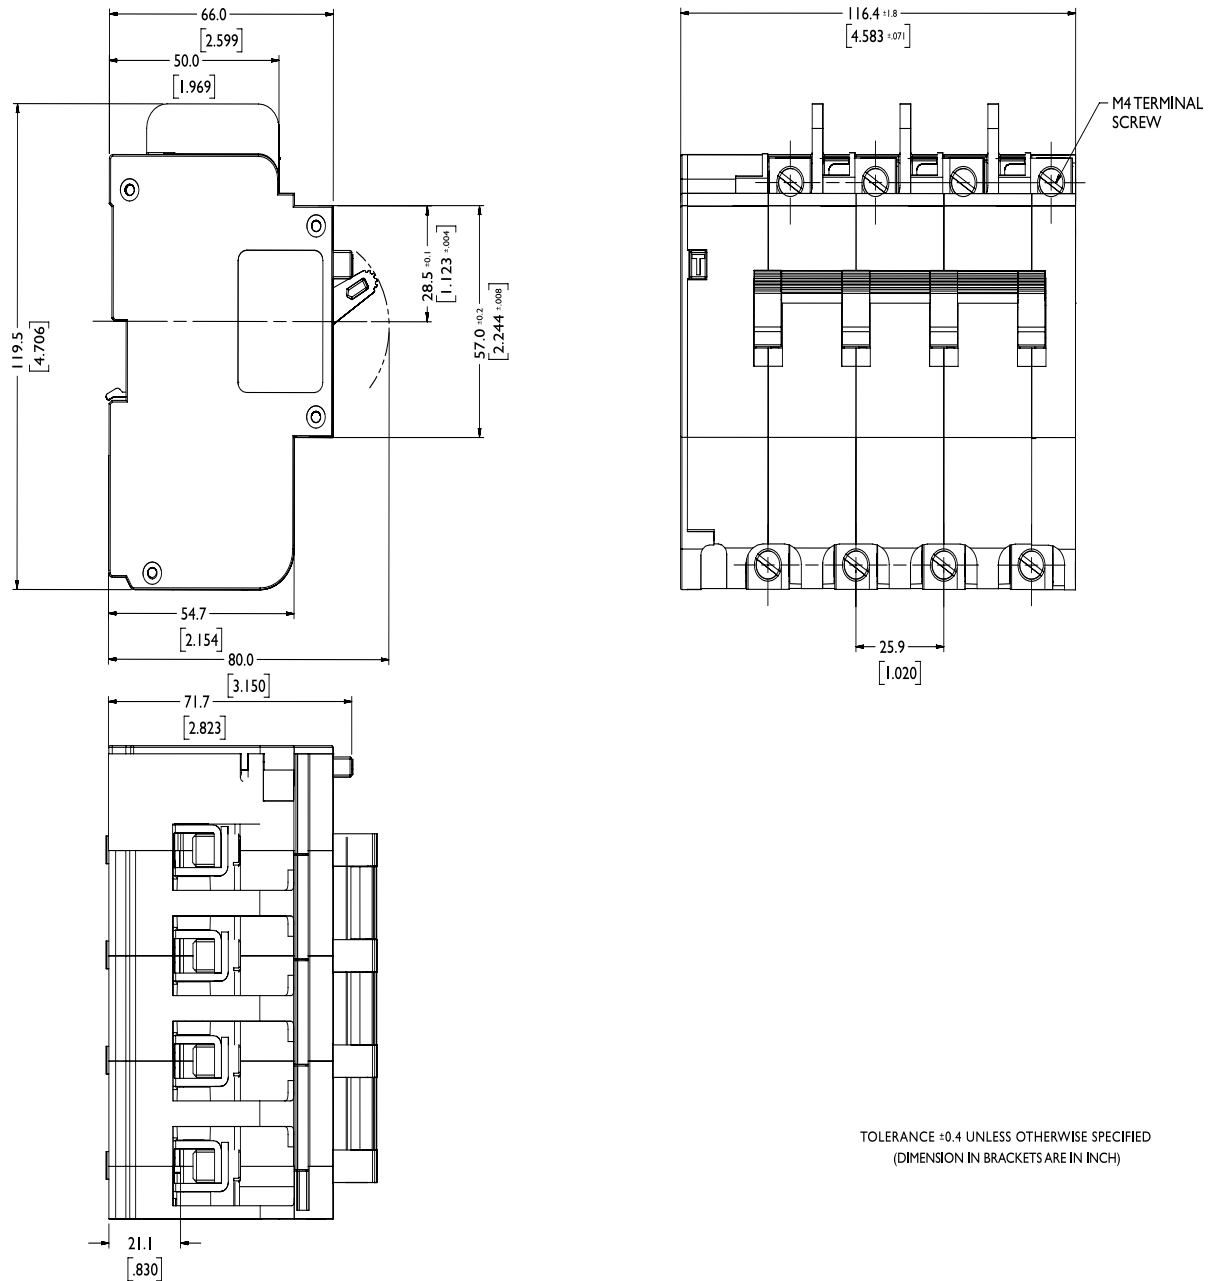

Архангельск (8182)63-90-72  
 Астана +7(7172)727-132  
 Астрахань (8512)99-46-04  
 Барнаул (3852)73-04-60  
 Белгород (4722)40-23-64  
 Брянск (4832)59-03-52  
 Владивосток (423)249-28-31  
 Волгоград (844)278-03-48  
 Вологда (8172)26-41-59  
 Воронеж (473)204-51-73  
 Екатеринбург (343)384-55-89  
 Иваново (4932)77-34-06  
 Ижевск (3412)26-03-58  
 Казань (843)206-01-48

Калининград (4012)72-03-81  
 Калуга (4842)92-23-67  
 Кемерово (3842)65-04-62  
 Киров (8332)68-02-04  
 Краснодар (861)203-40-90  
 Красноярск (391)204-63-61  
 Курск (4712)77-13-04  
 Липецк (4742)52-20-81  
 Магнитогорск (3519)55-03-13  
 Москва (495)268-04-70  
 Мурманск (8152)59-64-93  
 Набережные Челны (8552)20-53-41  
 Нижний Новгород (831)429-08-12  
 Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73  
 Омск (3812)21-46-40  
 Орел (4862)44-53-42  
 Оренбург (3532)37-68-04  
 Пенза (8412)22-31-16  
 Пермь (342)205-81-47  
 Ростов-на-Дону (863)308-18-15  
 Рязань (4912)46-61-64  
 Самара (846)206-03-16  
 Санкт-Петербург (812)309-46-40  
 Саратов (845)249-38-78  
 Севастополь (8692)22-31-93  
 Симферополь (3652)67-13-56  
 Смоленск (4812)29-41-54

Сочи (862)225-72-31  
 Ставрополь (8652)20-65-13  
 Сургут (3462)77-98-35  
 Тверь (4822)63-31-35  
 Томск (3822)98-41-53  
 Тула (4872)74-02-29  
 Тюмень (3452)66-21-18  
 Ульяновск (8422)24-23-59  
 Уфа (347)22948 -12  
 Хабаровск (4212)92-98-04  
 Челябинск (351)202-03-61  
 Череповец (8202)49-02-64  
 Ярославль (4852)69-52-93